# **ELIPTIC**

# PENDANT FIXTURE SUSPENSION

CFL bulb alternatives Alternatifs pour ampoule CFL	
INCANDESCENT BULB	COMPARABLE CFL BULB
AMPOULE INCANDESCENTE	AMPOULE CFL COMPARABLE
25W	<b>9</b> W
40W	11W
60W	13W
75W	18W
100W	<b>23W</b>
150W	40W



#105034 #105035 #105036

#### SAFETY INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY

WARNING: Lighted bulb / Shade assembly gets HOT! Do not touch while on.

### CAUTION IMPORTANT: FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN! DISCONNECT POWER AT MAIN ELECTRICAL PANEL BEFORE INSTALLATION.

**CAUTION:** Keep lamp away from curtains, bedding linens, and any other flammable materials.


- Do not look directly at lighted bulb.
- Turn off and allow lamp to cool before replacing bulb, cleaning or other maintenance.
- Do not use in wet locations.
- Do not touch the socket with wet hands.

GROUND WIRE WITH GREEN COLOUR LINE

NOTE: THE FIXTURE HEIGHT CAN BE ADJUSTED BY PUSHING IN THE PIN (1) AND SLIDING THE STEEL CABLE (2) UP OR DOWN.

#### MOUNTING INSTRUCTIONS

- 1. ATTACH THE MOUNTING STRAP "A" TO ELECTRICAL BOX "B" WITH THE TWO SCREWS "C".
- 2. MAKE THE WIRE CONNECTIONS. CONNECT THE ELECTRICAL BOX BLACK WIRE TO THE BLACK FIXTURE WIRE AND THE ELECTRICAL BOX WHITE WIRE TO THE WHITE FIXTURE WIRE. ATTACH THE GROUNDING WIRE THAT HAS THE GREEN COLOUR LINE TO THE MOUNTING STRAP GROUNDING SCREW "D".
- 3. ALIGN THE HOLES IN CANOPY "E" WITH THE TWO HOLES IN THE MOUNTING STRAP AND SECURE THE CANOPY TO THE MOUNTING STRAP "A" WITH THE TWO SCREWS "F".
- 4. SECURE SHADE "G" TO SHADE HOLDER "H" WITH THREADED KNOBS "I".

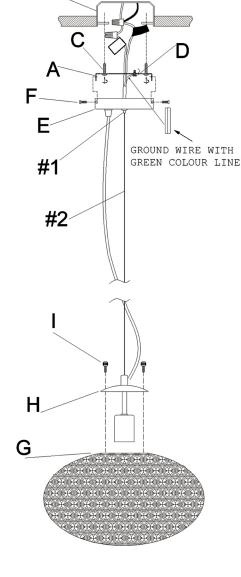

#### **BULB REPLACEMENT**

- Disconnect the power before replacing bulb.

#### TROUBLESHOOTING

- 1. If lamp does not light, check the bulb for a broken filament.
  - Replace bulb if necessary.
- If the external flexible cable or cord of this fixture is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

#### **MAINTENANCE**

- 1. To clean, use a soft cloth only.
- 2. Do not use any chemical or abrasive cleaners.

#### RÈGLES DE SÉCURITÉ RELATIVES AUX RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE ET DE BLESSURES

**AVERTISSEMENT**: L'ampoule et l'abat-jour deviennent CHAUDS lorsque l'ampoule est allumée! Ne pas toucher lorsque l'ampoule est allumée.

## AVERTISSEMENT IMPORTANTES : CETTE FIXTURE DOIT ETRE INSTALLÉ PAR UN ÉLECTRICIEN QUALIFIÉ ! COUPEZ LE COURANT AU PANNEAU ÉLECTRICIEN QUALIFIÉ !

ATTENTION : Placer la lampe à bonne distance des rideaux, de la literie et de tout autre matériau inflammable.


- Ne jamais regarder directement l'ampoule allumée.
- Éteindre et laisser refroidir la lampe avant de remplacer l'ampoule, de la nettoyer ou de faire tout autre type d'entretien.
- Ne pas utiliser dans des endroits mouillés.
- Ne pas toucher à la prise électrique avec les mains mouillées.

FIL DE MISE-A-TERRE AVEC LIGNE DE COULEUR VERTE

NOTE: LA HAUTEUR DE LA FIXTURE PEUT ETRE AJUSTER EN POUSSANT SUR LE GOUPILLE (1) ET EN GLISSANT LE CABLE D'ACIER (2) DE HAUT EN BAS.

#### INSTRUCTIONS D'INSTALLATION

- 1. ATTACHER LA SANGLE DE MONTAGE "A" A LA BOITE ELECTRIQUE "B" AVEC LES DEUX VIS "C".
- 2. RACCORDER LES FILS. RACCORDER LE FIL NOIR DE LA BOITE ELECTRIQUE AU FIL NOIR DE LA FIXTURE ET LE FIL BLANC DE LA BOITE ELECTRIQUE AU LE FIL BLANC DE LA FIXTURE. ATTACHER LES FILS DE MISE-A-TERRE QUI A LA LIGNE DE COULEUR VERTE A LA VIS DE MISE-A-TERRE "D" DE LA SANGLE DE MONTAGE.
- 3. ALIGNER LES TROUS SUR LE CANAPE "E" AVEC LES 2 TROUS SUR LA SANGLE DE MONTAGE "A" ET SECURISER LE CANAPE A LA SANGLE DE MONTAGE "A" AVEC LES DEUX VIS "F".
- 4. SECURISER L'ABAT-JOUR "G" AVEC LE SOUTIEN D'ABAT-JOUR "H" AVEC LES BOUTONS FILETES "I".

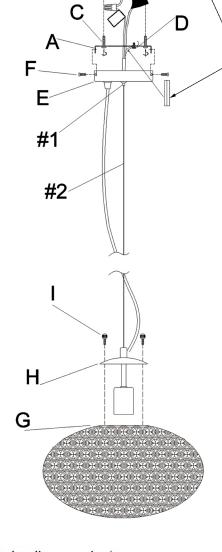

#### REMPLACEMENT DE L'AMPOULE

- Débranchez l'alimentation électrique avant de remplacer l'ampoule.

#### **DÉPANNAGE**

- 1. Si la lampe ne s'allume pas, regardez l'ampoule pour vérifier si l'un de ses filaments ne serait pas brisé. Remplacez l'ampoule au besoin.
- 2. Si le câble plat extérieur ou le fil électrique de cette fixture est endommagé, il doit absolument être remplacé par un électricien qualifié afin d'éviter tout danger.

#### **ENTRETIEN**

- 1. N'utiliser qu'un chiffon doux pour le nettoyage.
- 2. Ne jamais utiliser de détergent chimique ou abrasif.